

How Do I Use Bluetooth to Print?


To set up your Pocket PC to print to a Bluetooth printer, do the following:

1. Install HP Mobile Printing for Pocket PC software from the HP Web site at www.hp.com/go/pocketpcprint onto your HP iPAQ Pocket PC. This download is free.

NOTE: For more information on HP Mobile Printing for Pocket PC, insert the Companion CD that came with your HP iPAQ Pocket PC into the CD-ROM drive on your personal computer. Click **Enhance Your Experience, Productivity**, then **Pocket PC Applications**.

2. Be sure your Pocket PC is located within 10 m (30 feet) of the Bluetooth printer you wish to print to.
3. From the Today screen, tap the **Bluetooth** icon (BT) in the lower-right corner, then tap **Turn Bluetooth ON**.
4. **Bluetooth ON.**

Figure 1: Today screen

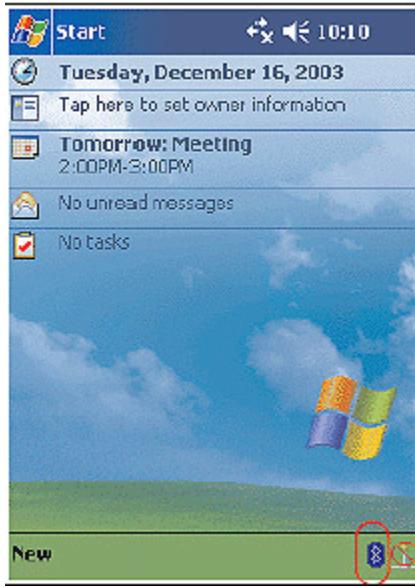

5. Tap the **Bluetooth** icon again, then tap **Bluetooth Manager**.
6. Tap **New, Connect, Explore a Bluetooth Device, Next**, then **Tap here to choose a device**.
7. Once the Bluetooth printer is listed in the Bluetooth Browser screen, tap **OK** in the upper-right corner to close the screen.
8. From the Today screen, tap **Start, Programs, HP Mobile Printing, Tools**, then **Configuration, Printers** tab.
9. Tap **Add, Bluetooth printer, Choose printer** button, **Search for a Bluetooth printer**, then **Next** button.
10. Select the Bluetooth printer you want to print to, then tap **Add**.

NOTE: If your printer is not listed, go to the HP Web site at www.hp.com/go/pocketpcprint and download the latest version of HP Mobile Printing.

11. You may receive a message that says, **Unable to determine printer model. Do you still want to select a printer model from the printer list?; tap OK.**

12. Select the printer, then tap **Add**, **OK**, **Printer added**, then **OK**.
13. Tap **OK** in the upper-right corner to exit HP Mobile Printing.

NOTE: You should only need to perform the above steps one time for each Bluetooth-enabled printer you want to use. You do not need to reinstall drivers once you add a printer to your list.

To print to a Bluetooth printer, do the following:

1. Tap **Start**, **Programs**, then **HP Mobile Printing**.
2. Tap the **E-mail** icon to search for an e-mail to print, or tap the **Search** icon to search for another document to print.
3. Select the document to print, then tap the **Print Now** button.